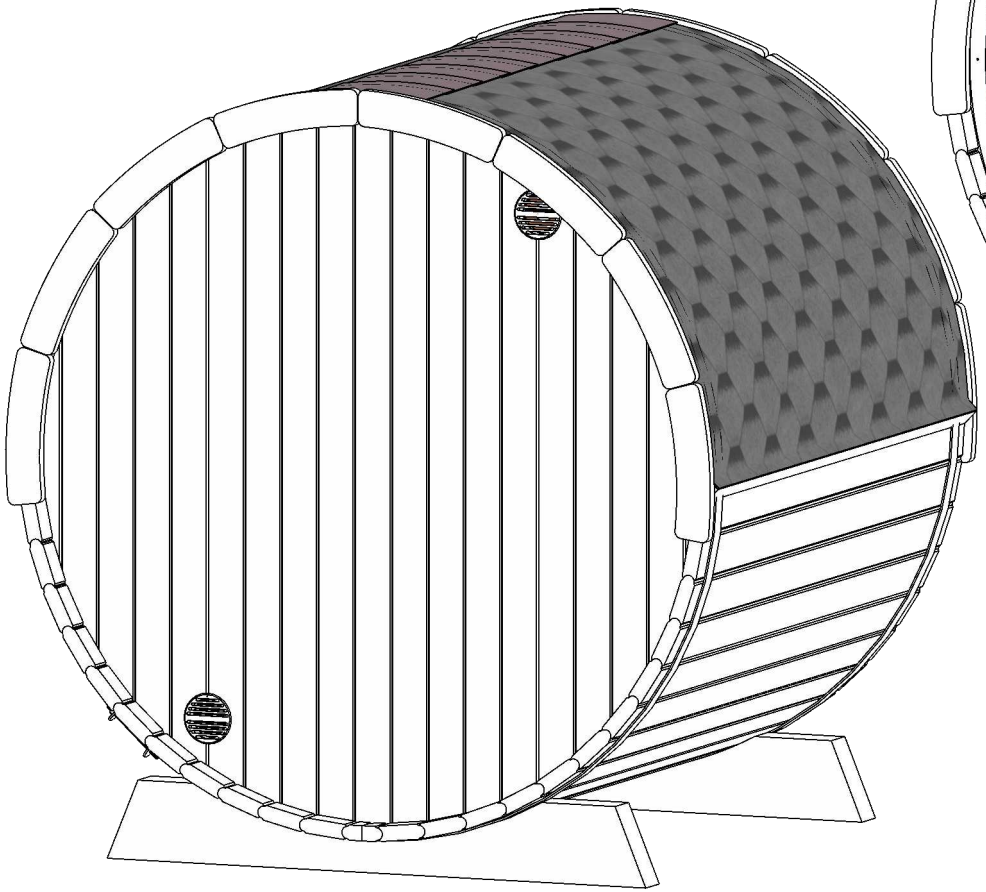
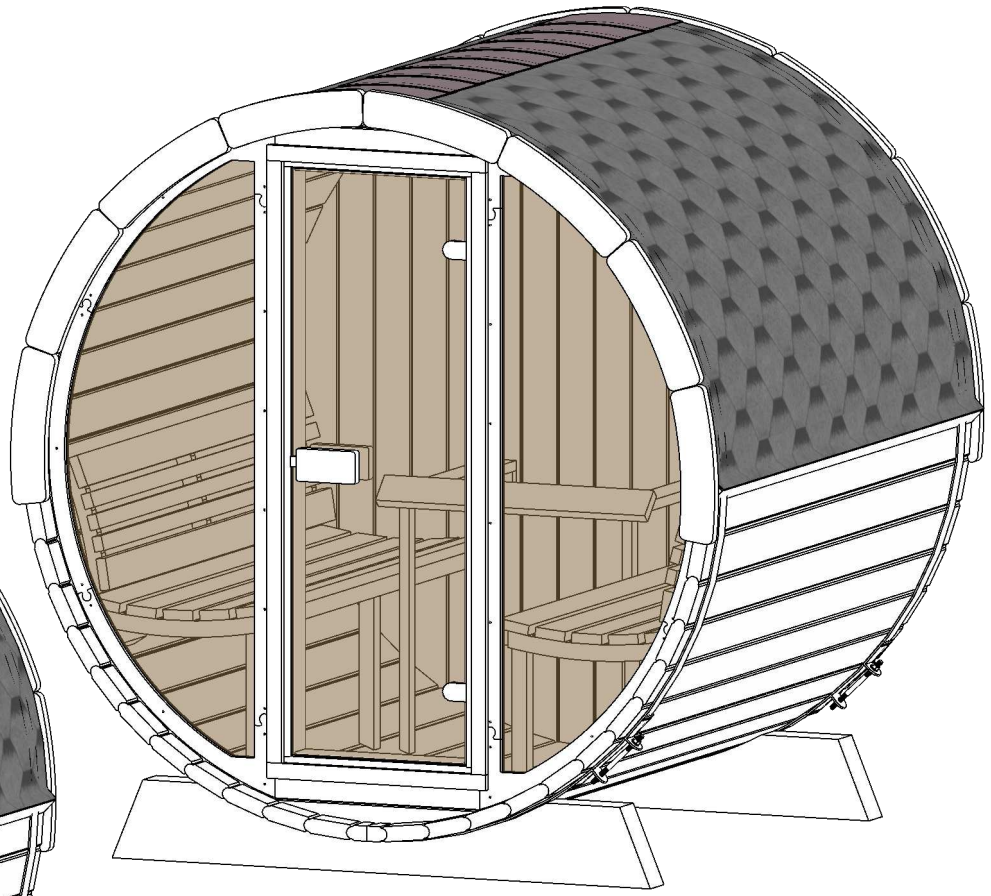
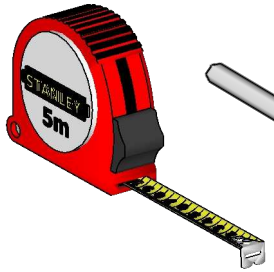
saunalife®



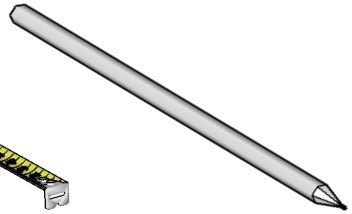


Note: Please read manual before construction

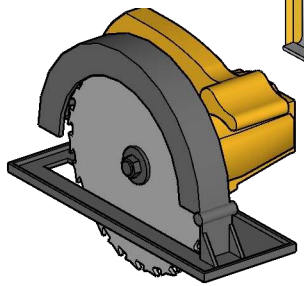
Tools needed



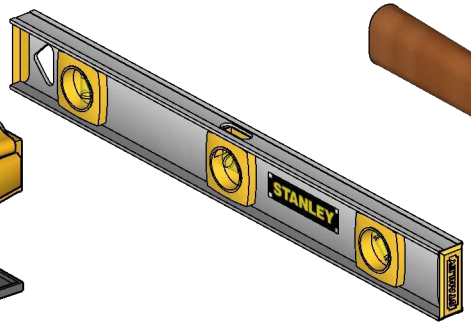
Measuring tape



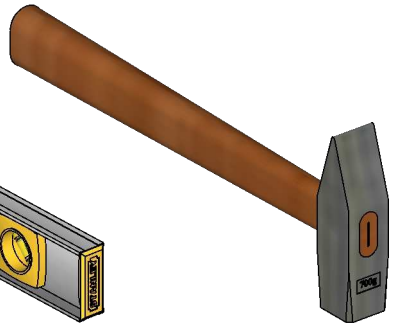
Marker pen



Circular saw



Water level



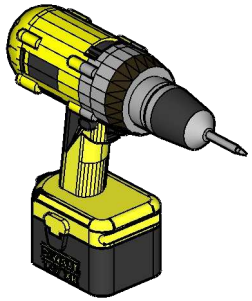
Hammer



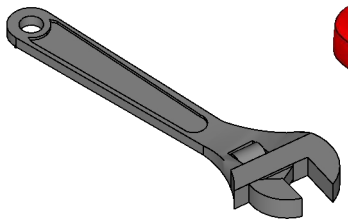
Extra hands



Screwdriver



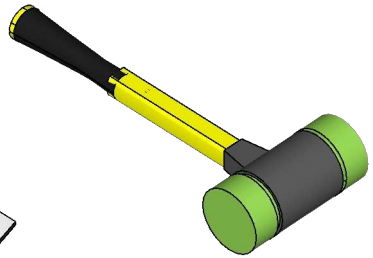
Drill



Cresent wrench



Utility knife

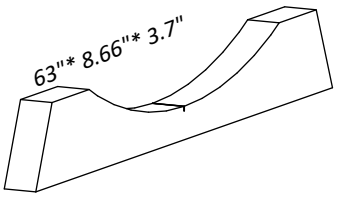
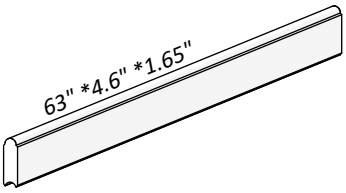
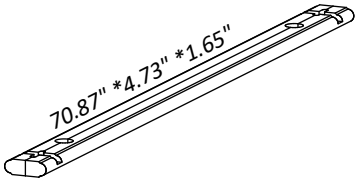

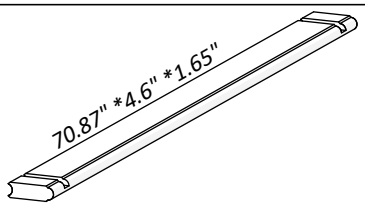

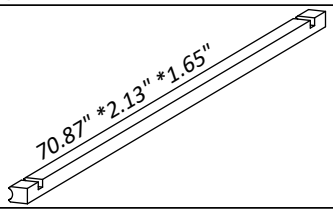

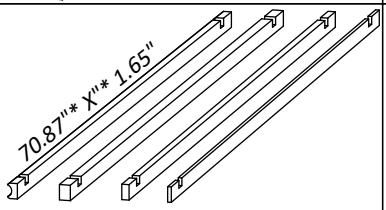
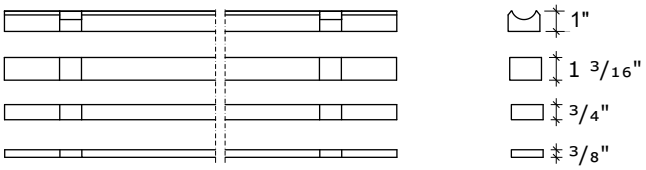
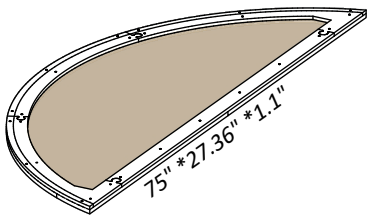
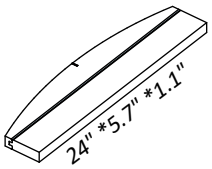
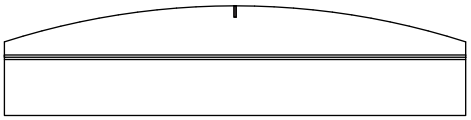
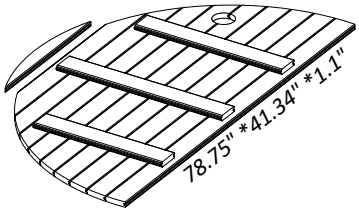


Rubber mallet

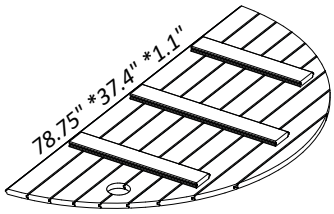
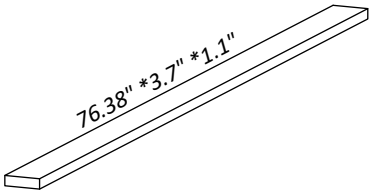
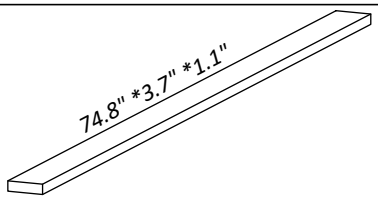
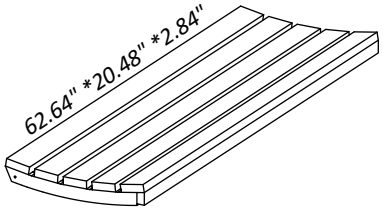
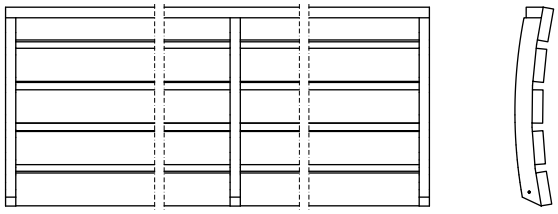
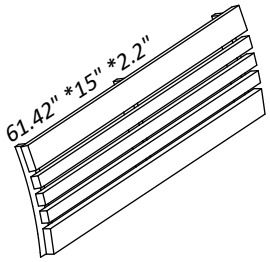
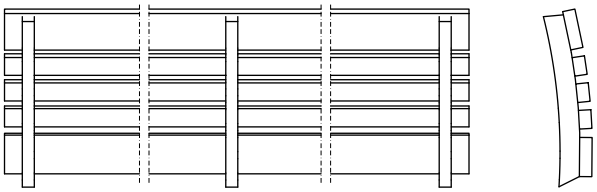
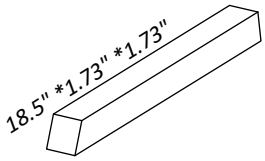


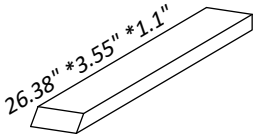


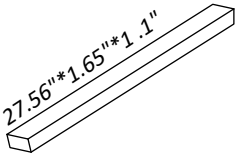



Ratchet strap

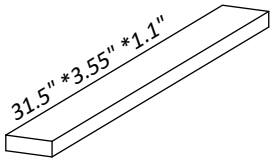
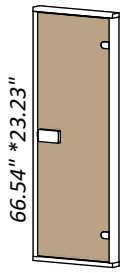
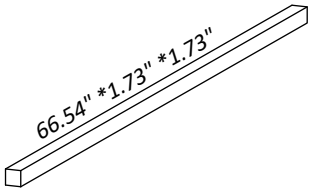
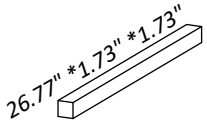
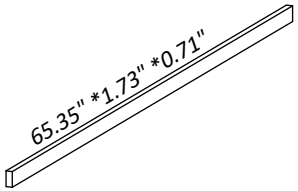
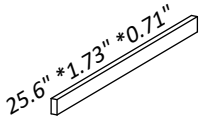
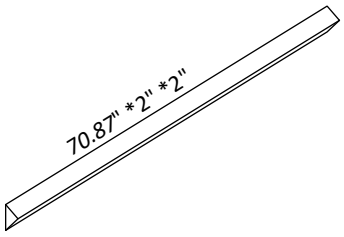

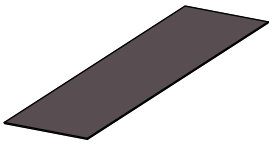
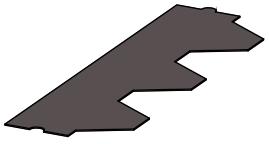
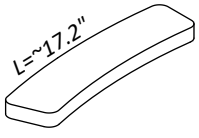

Details list 1/4

DET 1 ***Article.*** *K-PT-JAL-200D*	**x2**		
DET A ***Article.*** *K-STL117/1600*	**x2**		
DET 2 ***Article.*** *T-STL117/1800XLM01*	**x1**		
DET 3 ***Article.*** *T-STL117/1800-01*	**x59**		
DET 6 *Det.2 jääk* ***Article.*** *T-STL117/1800XL-01*	**x2**		
DET 6c/d/e/f *Lõika 1-st STL-st* ***Article.*** *T-STL117/1800KO-01*	**x1**		
DET S ***Article.*** *20-TE-PR-12/15*	**x2**		
DET T ***Article.*** *T-SL117/610UK2*	**x2**		
DET Y1 ***Article.*** *T-20-PTS/28-01V*	**x1**		

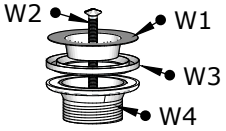


Details list 2/4

DET Y2 ***Article.*** *T-20-PTS/28-01P*	**x1**		
DET U1 ***Article.*** *K-TL94/1940*	**x1**		
DET U2 ***Article.*** *K-TL94/1900*	**x1**		
DET 10 ***Article.*** *TL-LAMOD-1591-KA01*	**x2**		
DET 14 ***Article.*** *TL-STMOD-1560-KA01*	**x2**		
DET 10a ***Article.*** *K-HP44/470XP-XP*	**x4**		
DET 10c ***Article.*** *K-HP44/170*	**x4**		
DET 15a ***Article.*** *TL-LAV90/670XP*	**x2**		
DET 15b ***Article.*** *TL-LAV42/90*	**x2**		
DET 15c ***Article.*** *TL-LAV42/700XP*	**x2**		

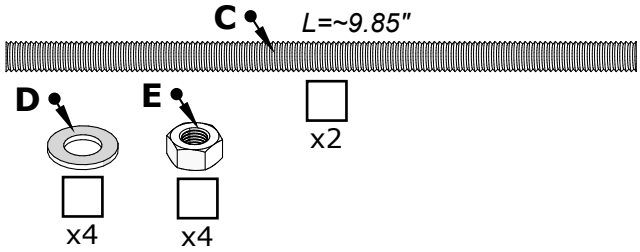
Details list 3/4

DET 15d ***Article.*** *TL-LAV90/800*	**x1**		
DET 21 ***Article.*** *U-TH6/17-PR*	**x1**		
DET 21c ***Article.*** *K-HP44/1690*	**x2**		
DET 21d ***Article.*** *K-HP44/680*	**x2**		
DET 21a ***Article.*** *K-HL44/1660*	**x2**		
DET 21b ***Article.*** *K-HL44/650*	**x2**		
DET 22 ***Article.*** *T-STL-1800-XX*	**x2**		
DET N ***Article.*** *KAT-HAR-MUST*	**x7**		
DET O ***Article.*** *KAT-SIN-MUST*	**x51**		
DET 25 ***Article.*** *MU-OL-SAUN*	**x16**		

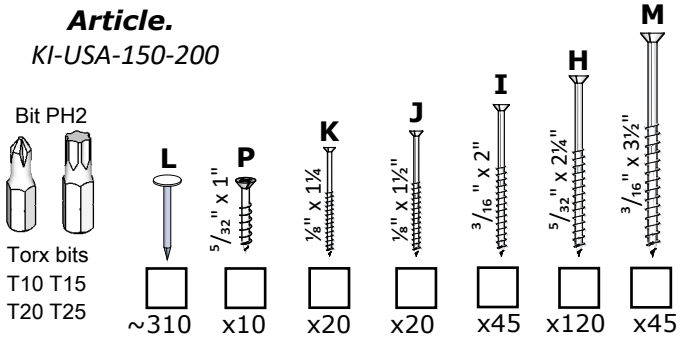
Details list 4/4

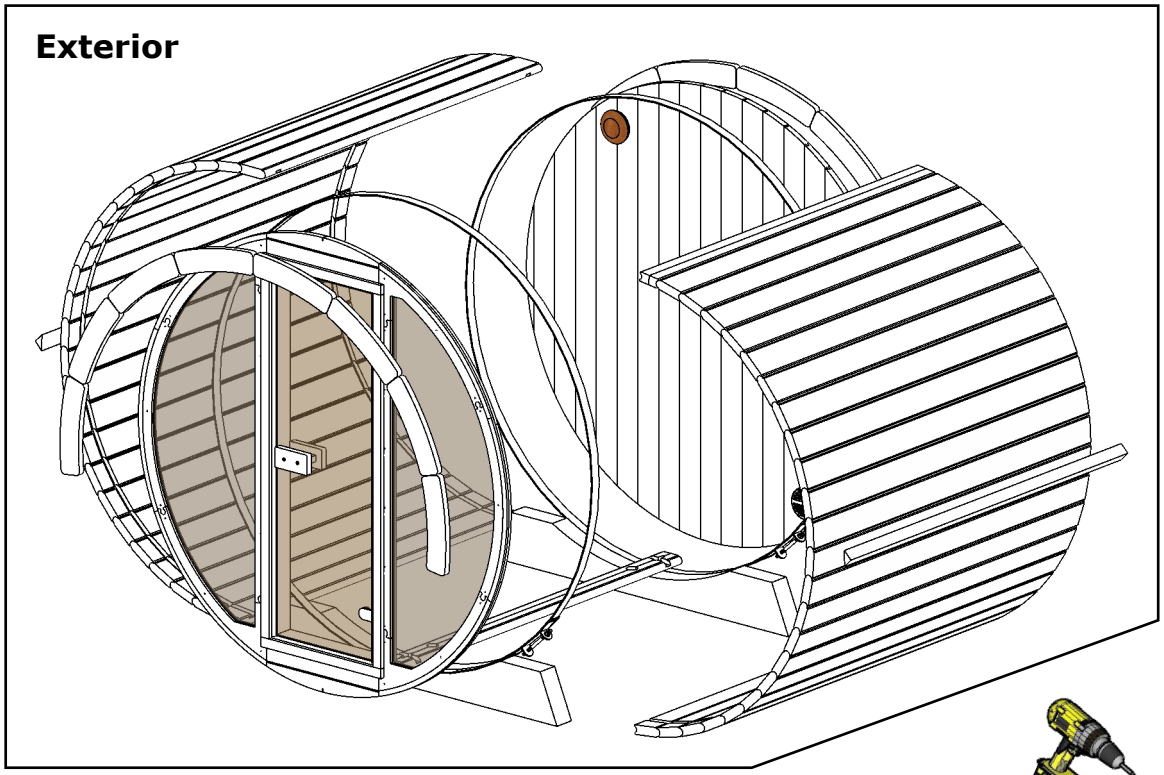
DET W ***Article.*** *MU-TRAPP*	**x2** kmpl		
DET B ***Article.*** *MU-VIT6220-KLZN*	**x2**		
DET G ***Article.*** *MU-VENT-100-PU*	**x1**		
DET F ***Article.*** *MU-VENT-100-ZN*	**x3**		

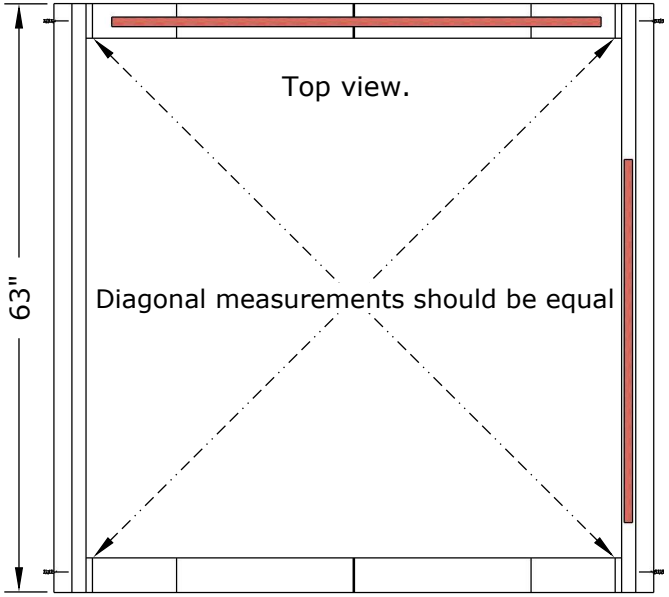
Article.
KI-KERL-12-RV2

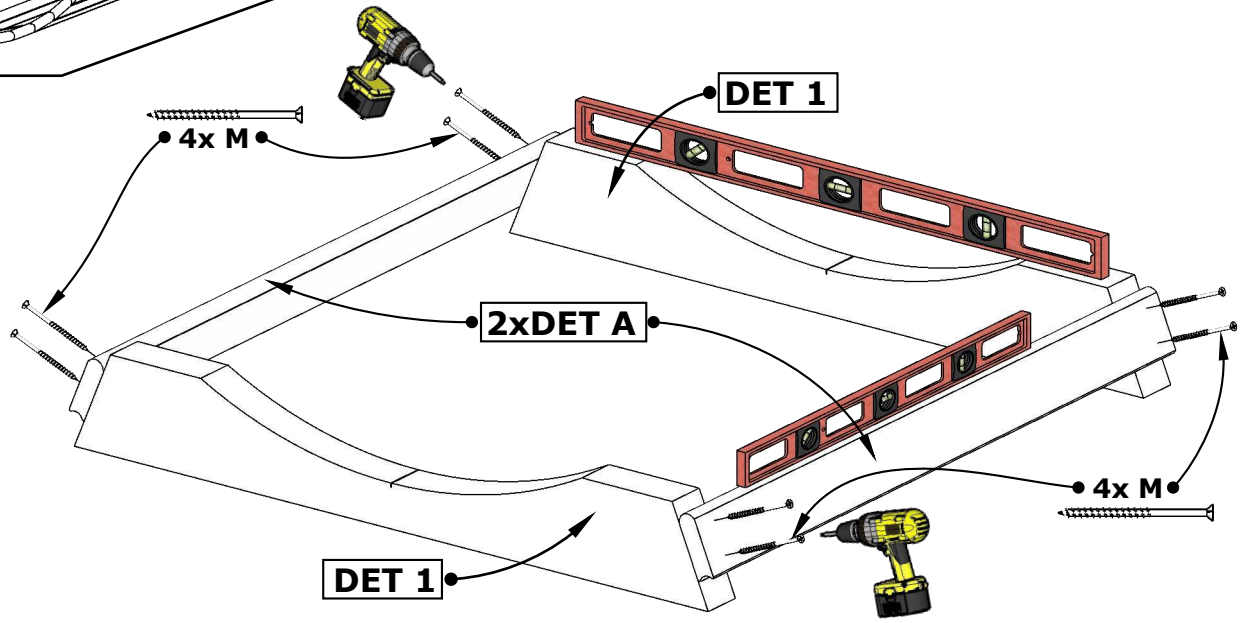


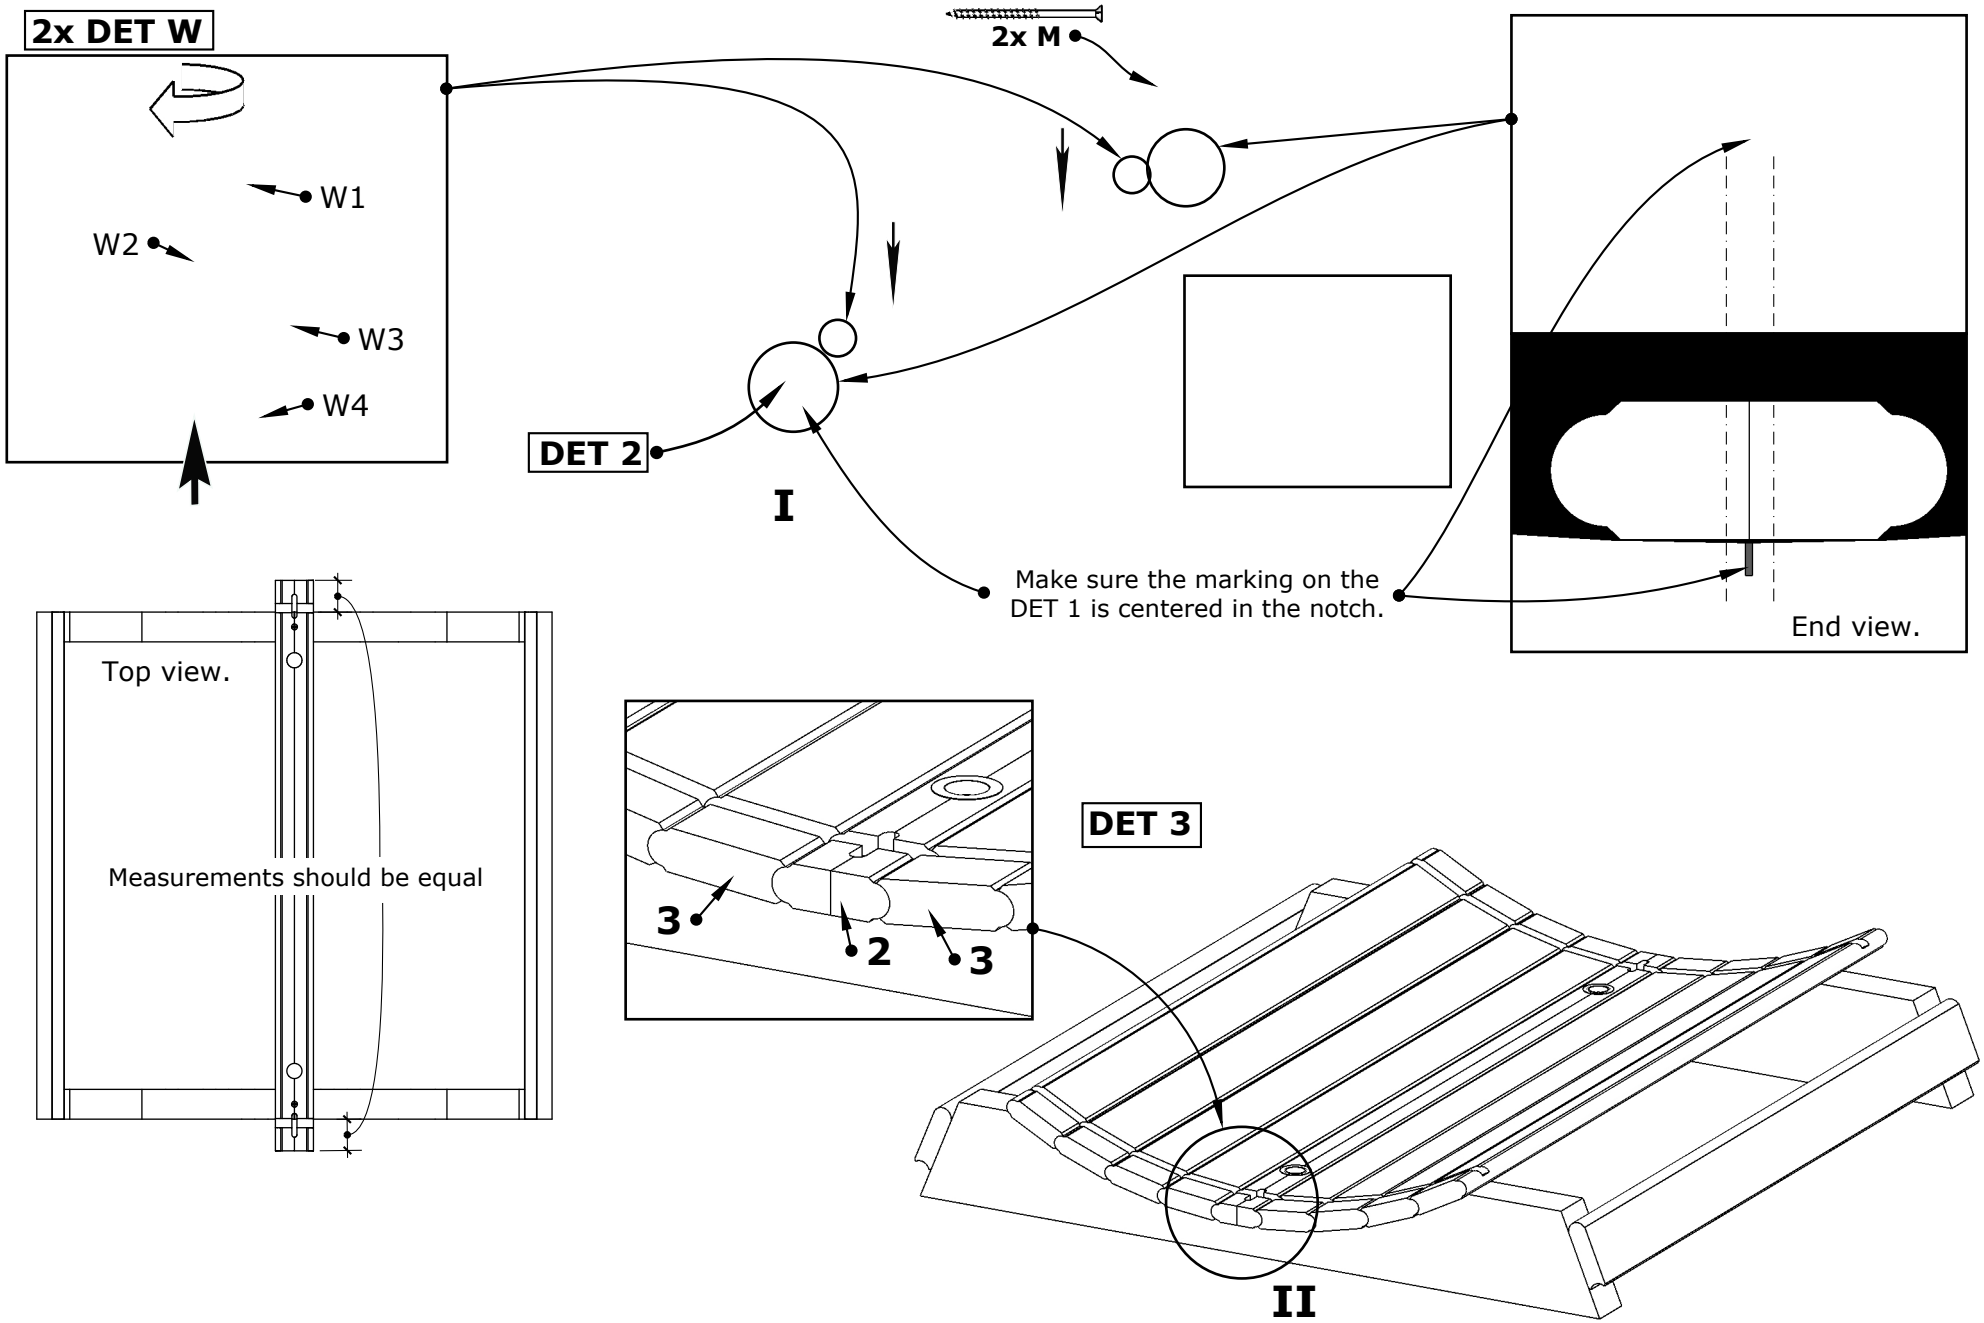
Article.
KI-USA-150-200




Exterior


Top view.
63"
Diagonal measurements should be equal


DET 1
4x M
2xDET A
4x M
DET 1


2x DET W
W1
W2
W3
W4
2x M
DET 2
I
Make sure the marking on the
DET 1 is centered in the notch.
End view.
Top view.
Measurements should be equal
DET 3
3
2
3
II