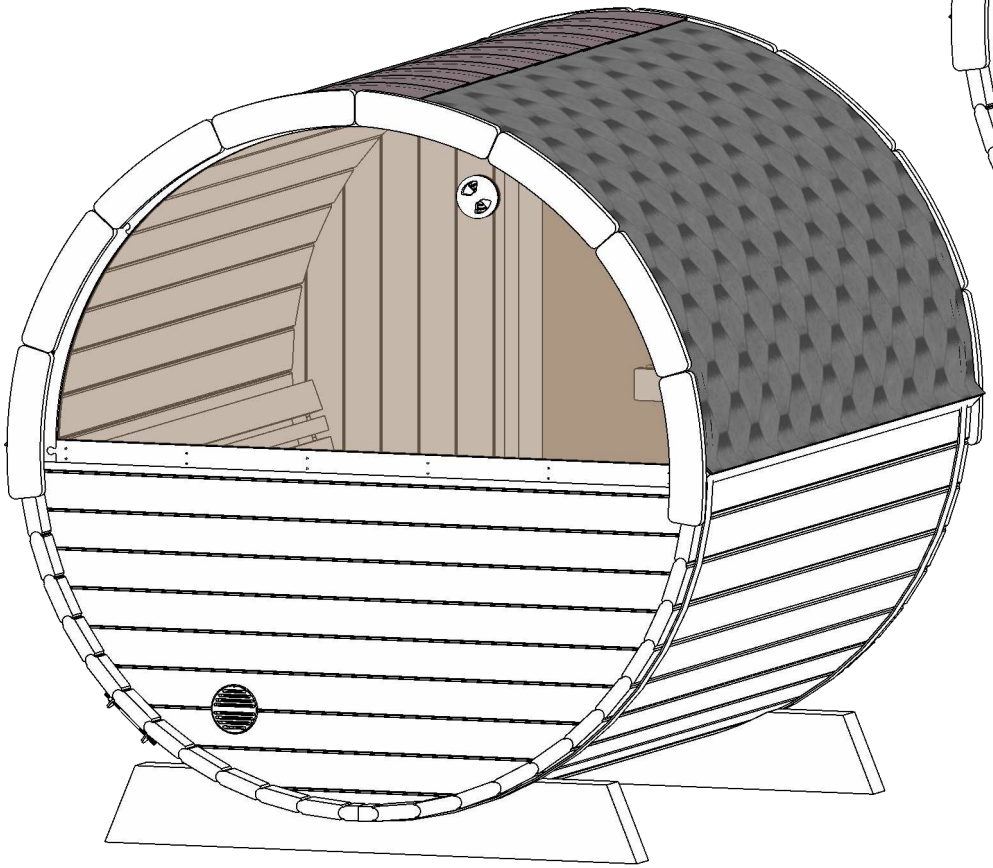
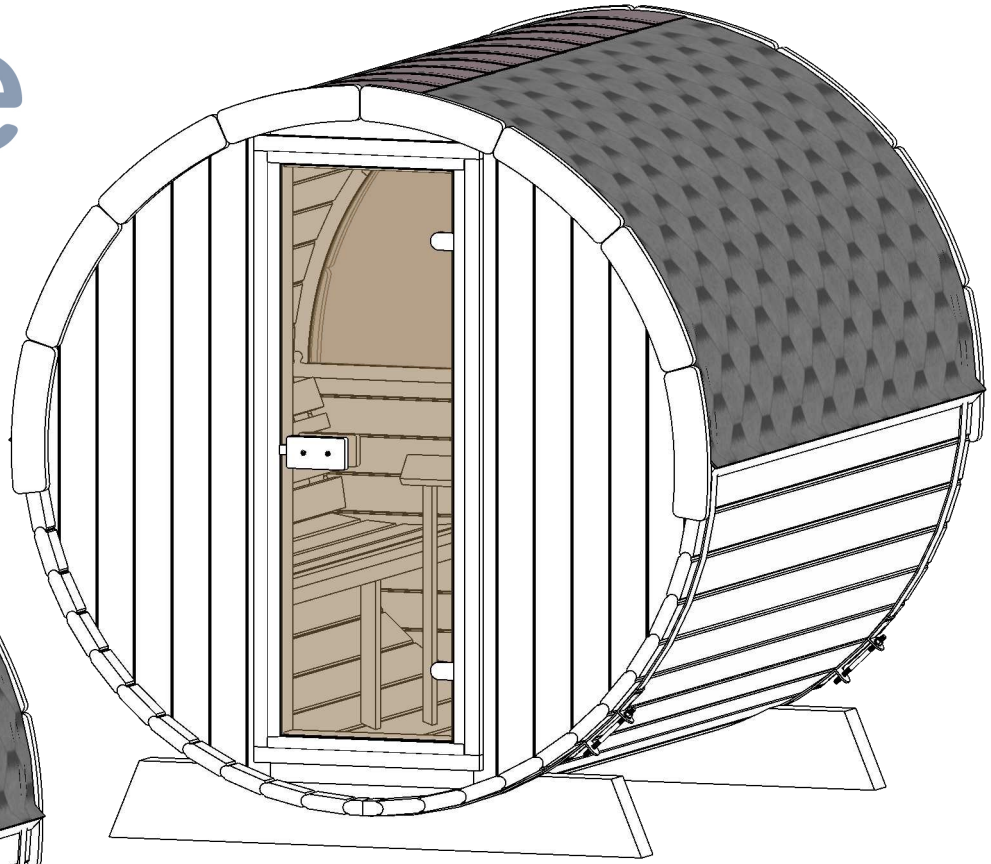
Ergo Series E8W Barrel Sauna
Half Glass Window 87"D x 85"H

saunalife

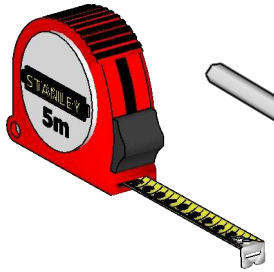





Note: Please read manual before construction

260701


Tools needed




Measuring tape

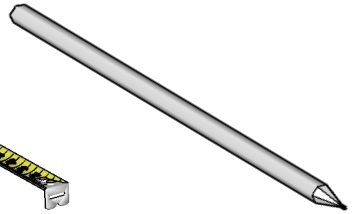


Marker pen

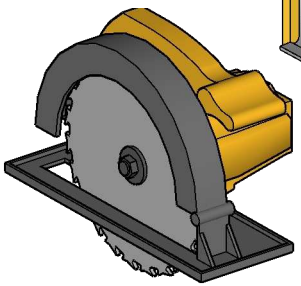

Circular saw

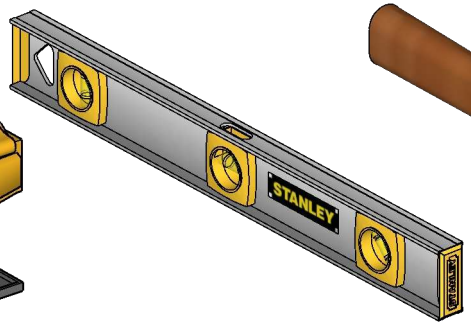

Water level

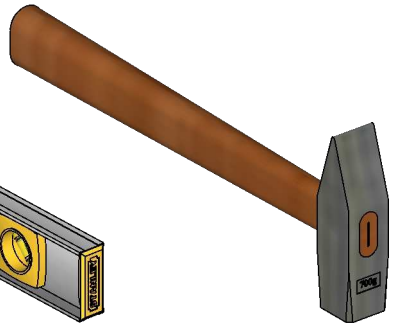


Hammer




Extra hands



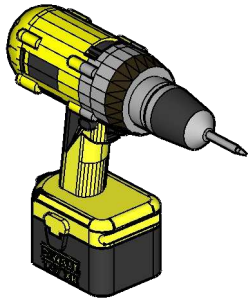Screwdriver




Drill

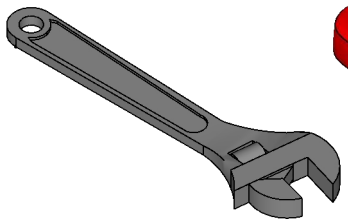

Cresent wrench



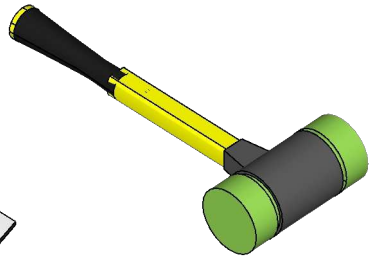Utility knife
















Rubber mallet


















Ratchet strap

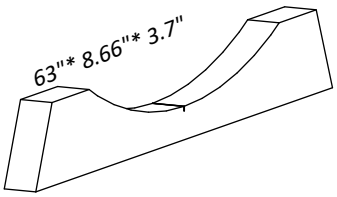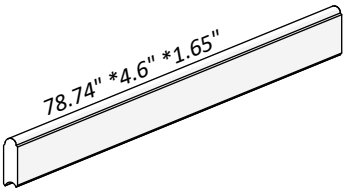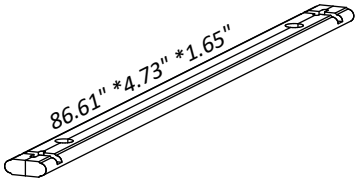

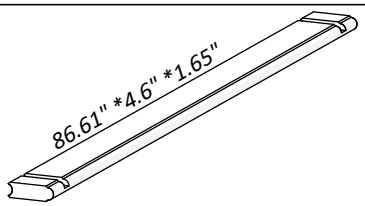

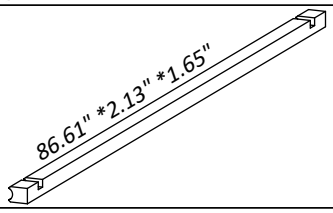

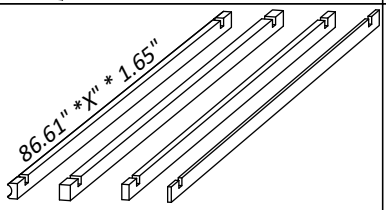
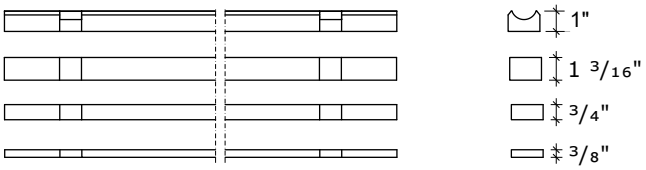
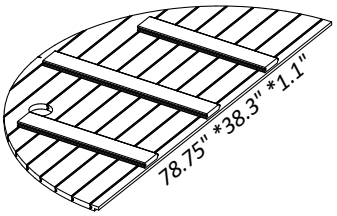
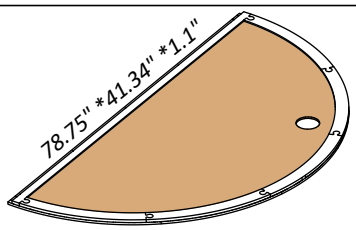
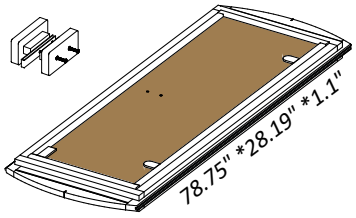
Details list 1/3

DET 1 ***Article.*** *K-PT-JAL-200D*	**x2**		
DET A ***Article.*** *K-STL117/2000*	**x2**		
DET 2 ***Article.*** *T-STL117/2200XLM02*	**x1**		
DET 3 ***Article.*** *T-STL117/2200-02*	**x59**		
DET 6 *Det.2 jääk* ***Article.*** *T-STL117/2200XL-02*	**x2**		
DET 6c/d/e/f *Lõika 1-st STL-st* ***Article.*** *T-STL117/2200KO-02*	**x1**		
DET Y1 ***Article.*** *T-20-PK/28F12*	**x1**		
DET Y2 ***Article.*** *20-PK-PR-12/15*	**x1**		
DET T ***Article.*** *U-KL-6/17-KO*	**x1**		

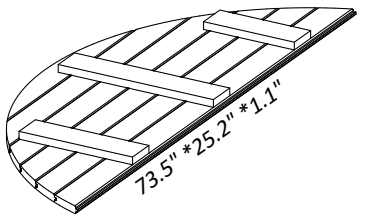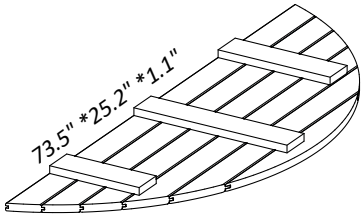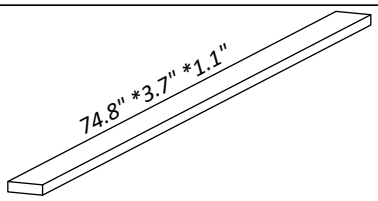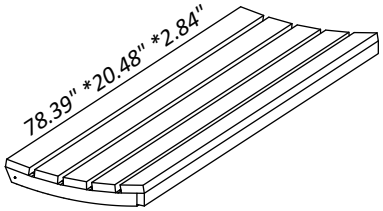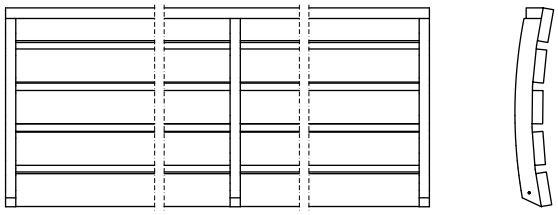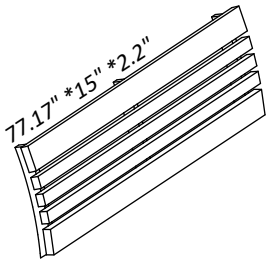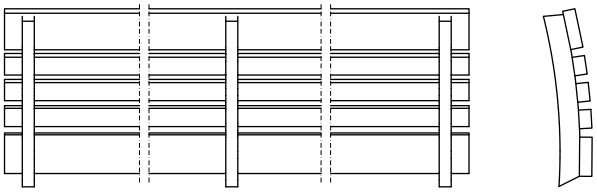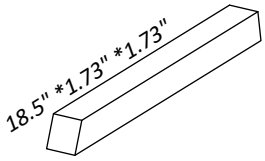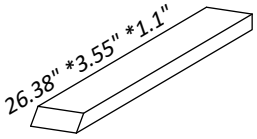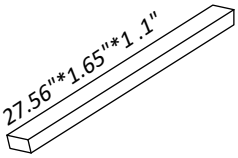
Details list 2/3

DET Sa ***Article.*** *T-20-PES/28-01P*	**x1**		
DET Sb ***Article.*** *T-20-PES/28-01V*	**x1**		
DET U1 ***Article.*** *K-TL94/1900*	**x2**		
DET 10 ***Article.*** *TL-LAMOD-1991-KA01*	**x2**		
DET 14 ***Article.*** *TL-STMOD-1960-KA01*	**x2**		
DET 10a ***Article.*** *K-HP44/470XP-XP*	**x2**		
DET 10c ***Article.*** *K-HP44/170*	**x2**		
DET 15a ***Article.*** *TL-LAV90/670XP*	**x2**		
DET 15b ***Article.*** *TL-LAV42/90*	**x2**		
DET 15c ***Article.*** *TL-LAV42/700XP*	**x2**		

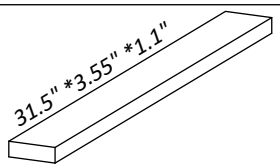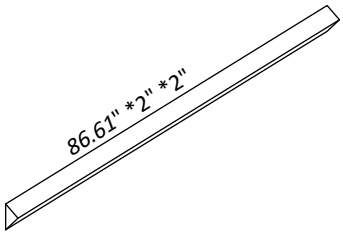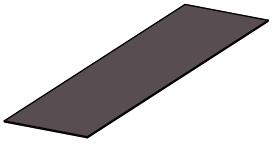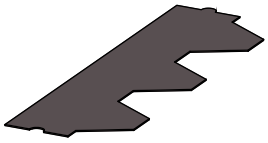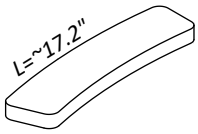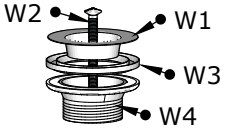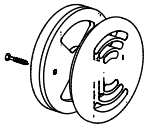
Details list 3/3


DET 15d ***Article.*** *TL-LAV90/800*	**x1**		
DET 22 ***Article.*** *T-STL-2200-XX*	**x2**		
DET N ***Article.*** *KAT-HAR-MUST*	**x9**		
DET O ***Article.*** *KAT-SIN-MUST*	**x63**		
DET 25 ***Article.*** *MU-OL-SAUN*	**x16**		
DET W ***Article.*** *MU-TRAPP*	**x2** kmpl		
DET B ***Article.*** *MU-VIT6220-KLZN*	**x2**		
DET Z ***Article.*** *MU-VENT-100-VIN*	**x1**		
DET F ***Article.*** *MU-VENT-100-ZN*	**x2**		

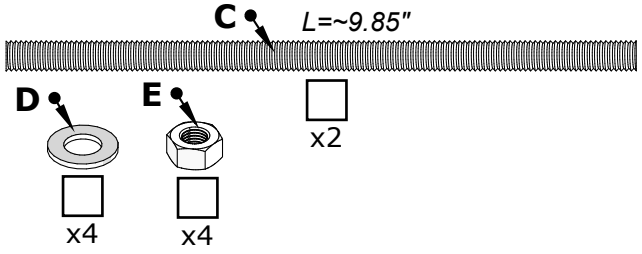
Article.
KI-KERL-12-RV2




Article.
KI-USA-150-200

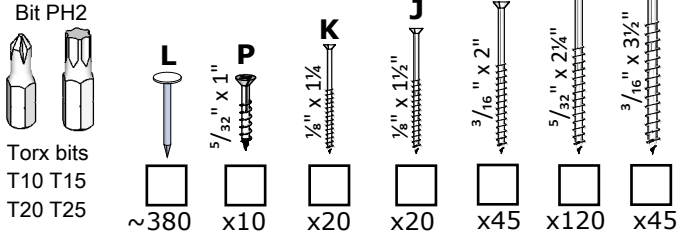


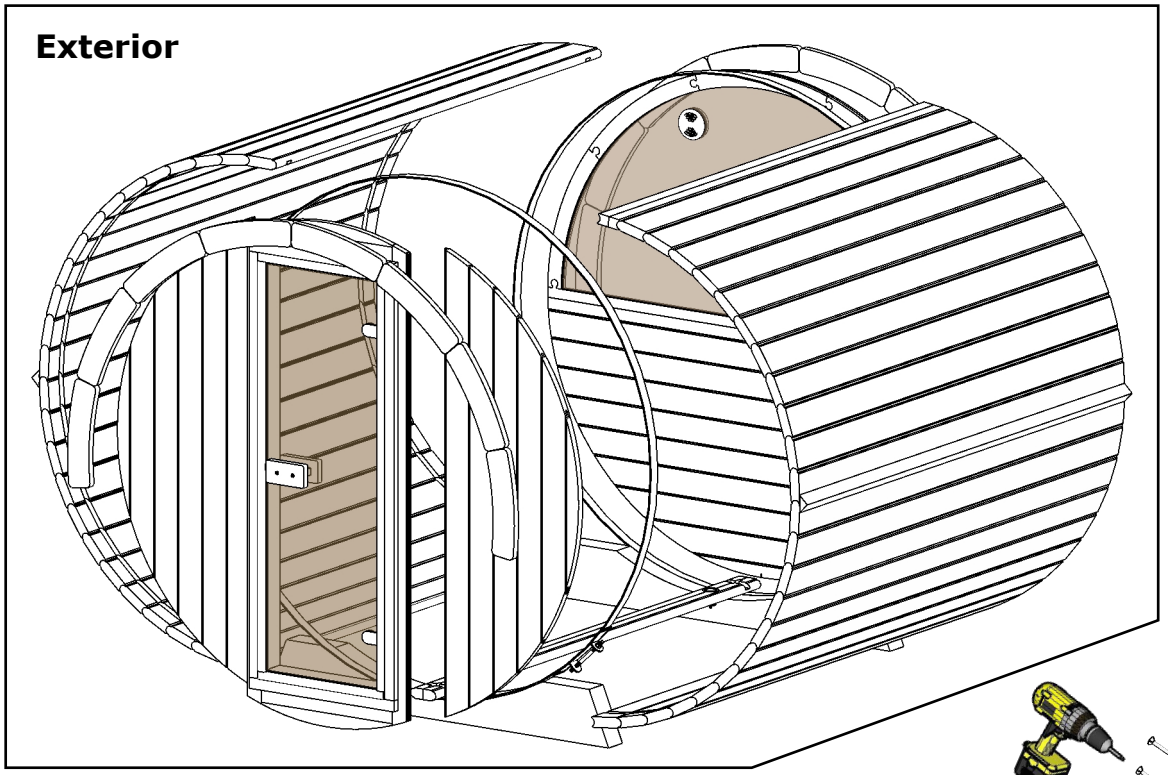
Exterior

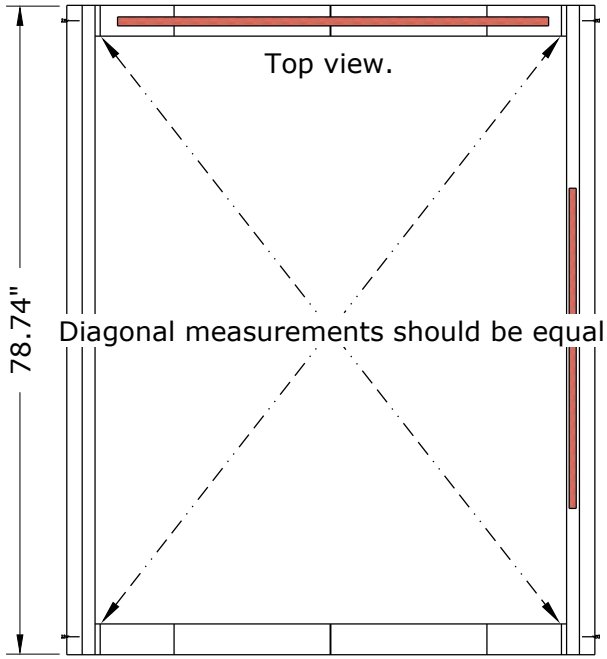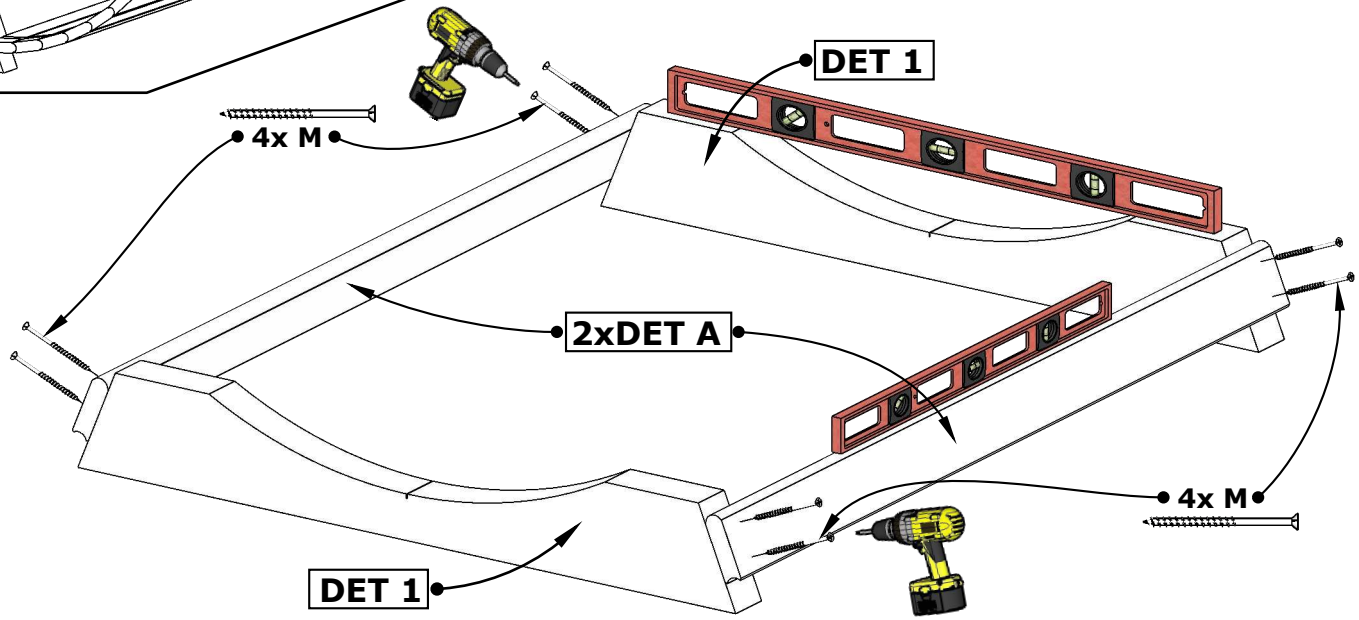

Top view.
78.74"
Diagonal measurements should be equal


DET 1
4x M
2xDET A
4x M
DET 1

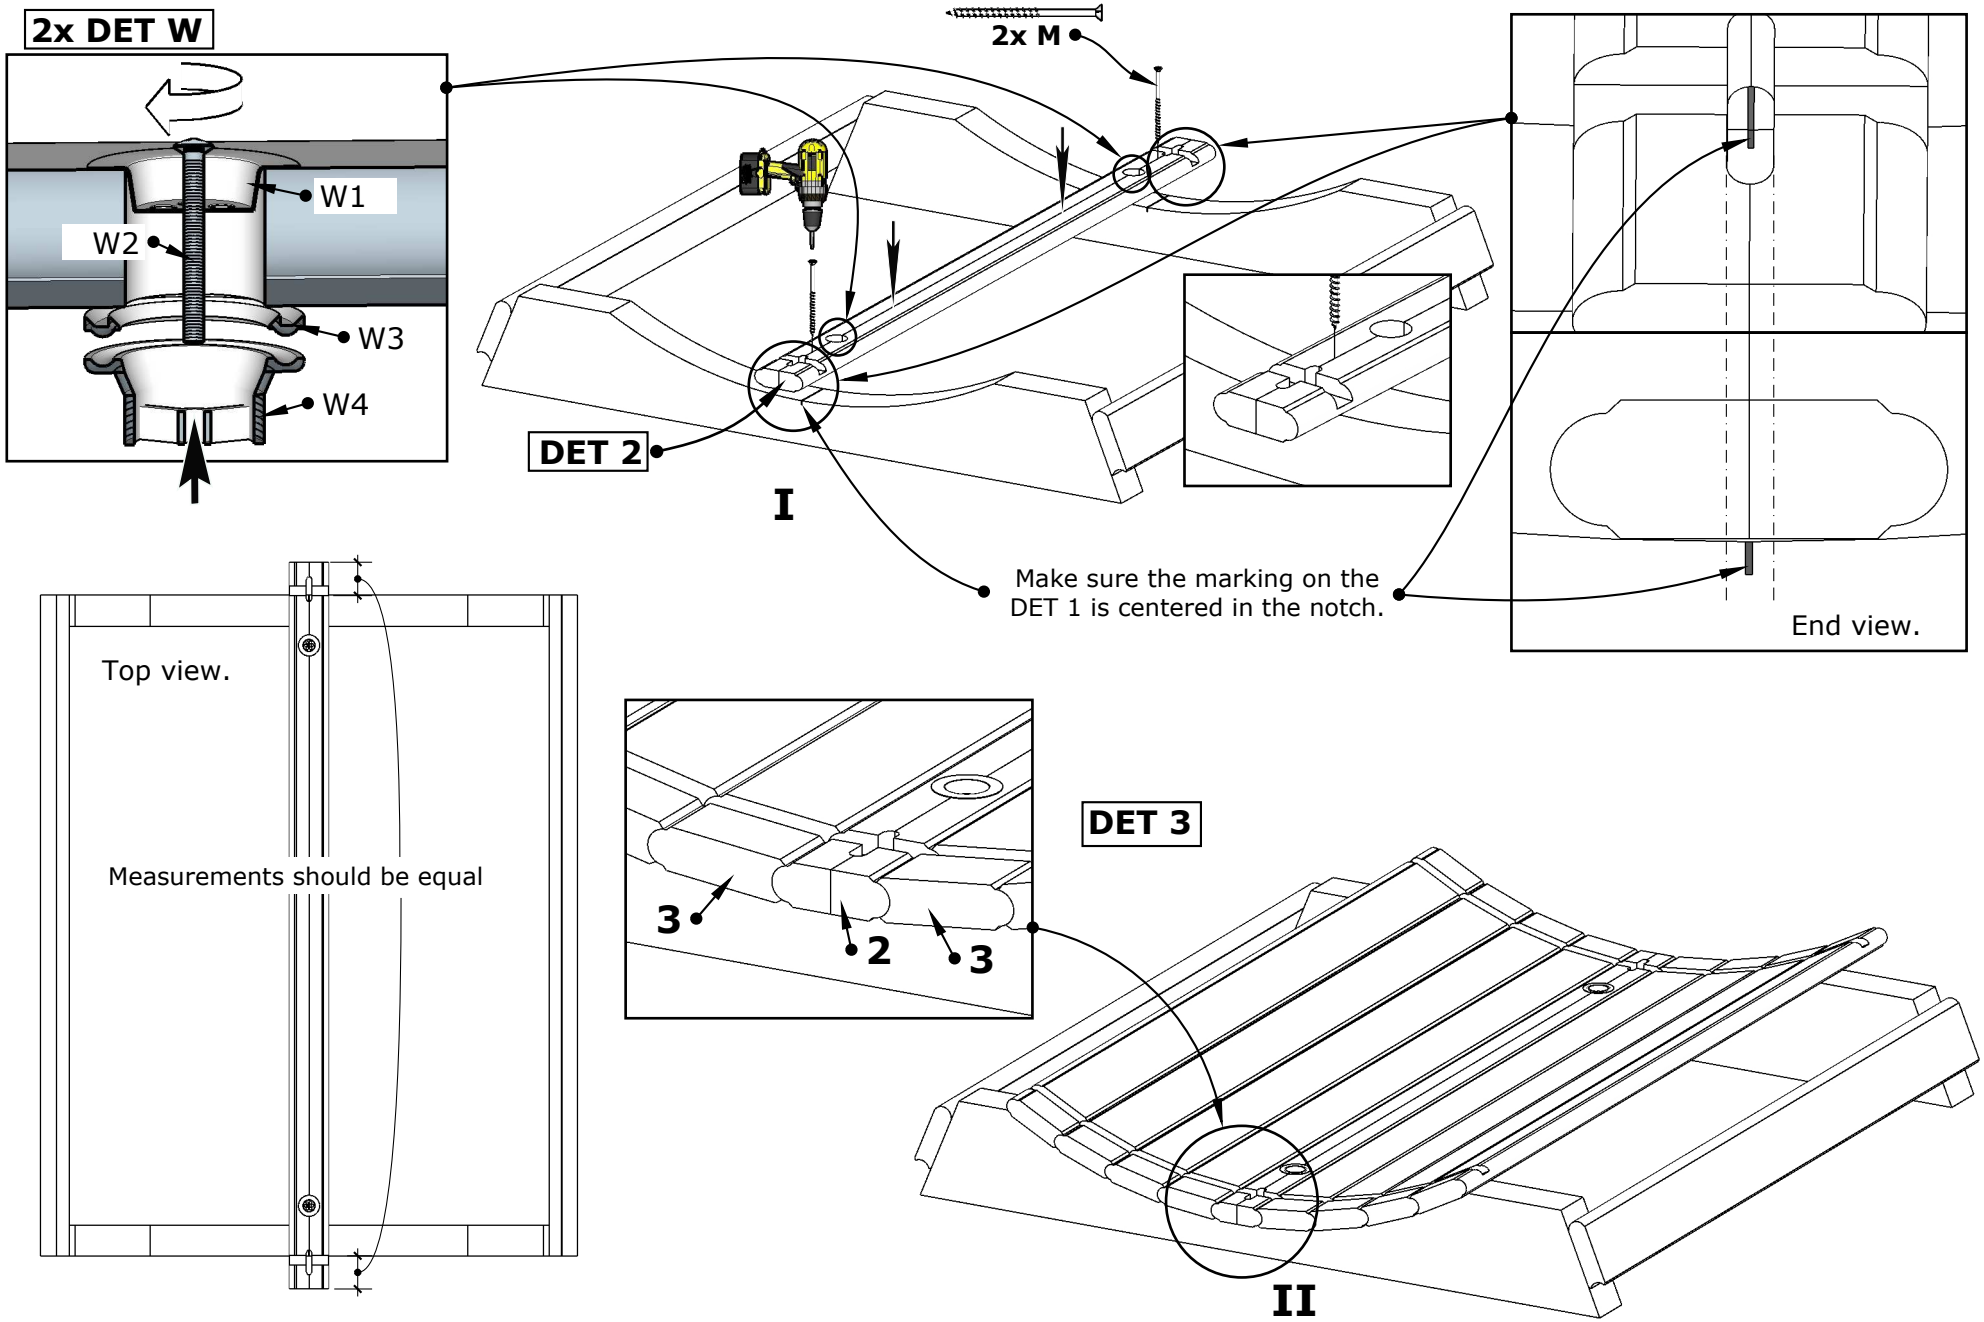
1.


2x DET W
W1
W2
W3
W4
2x M
DET 2
I
Make sure the marking on the
DET 1 is centered in the notch.
End view.
Top view.
Measurements should be equal
DET 3
3
2
3
II

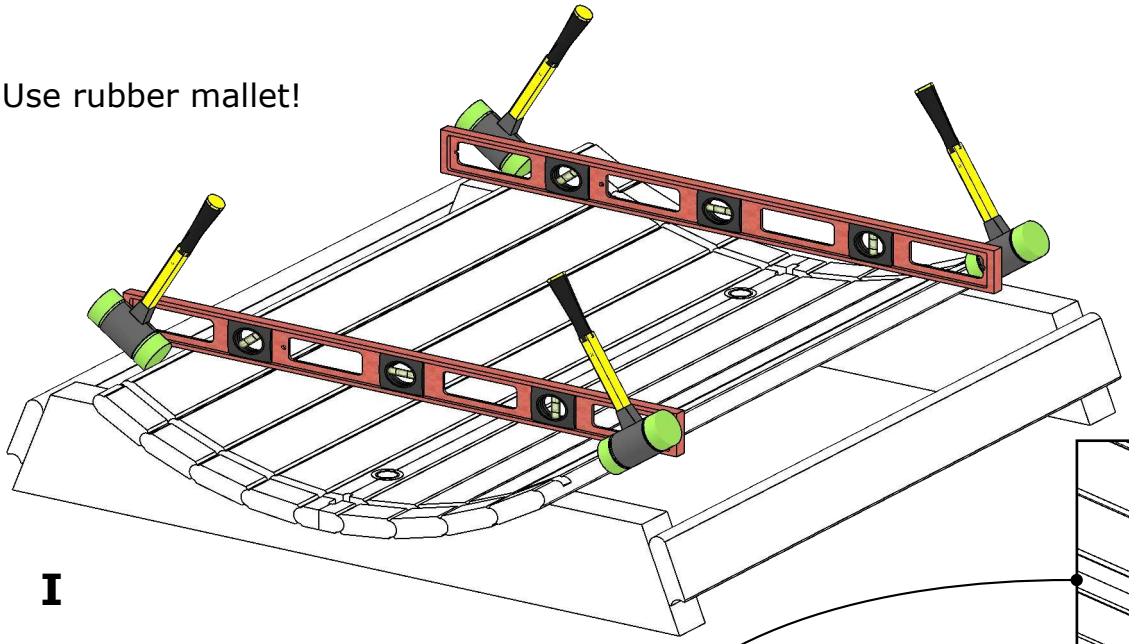Use rubber mallet!



I

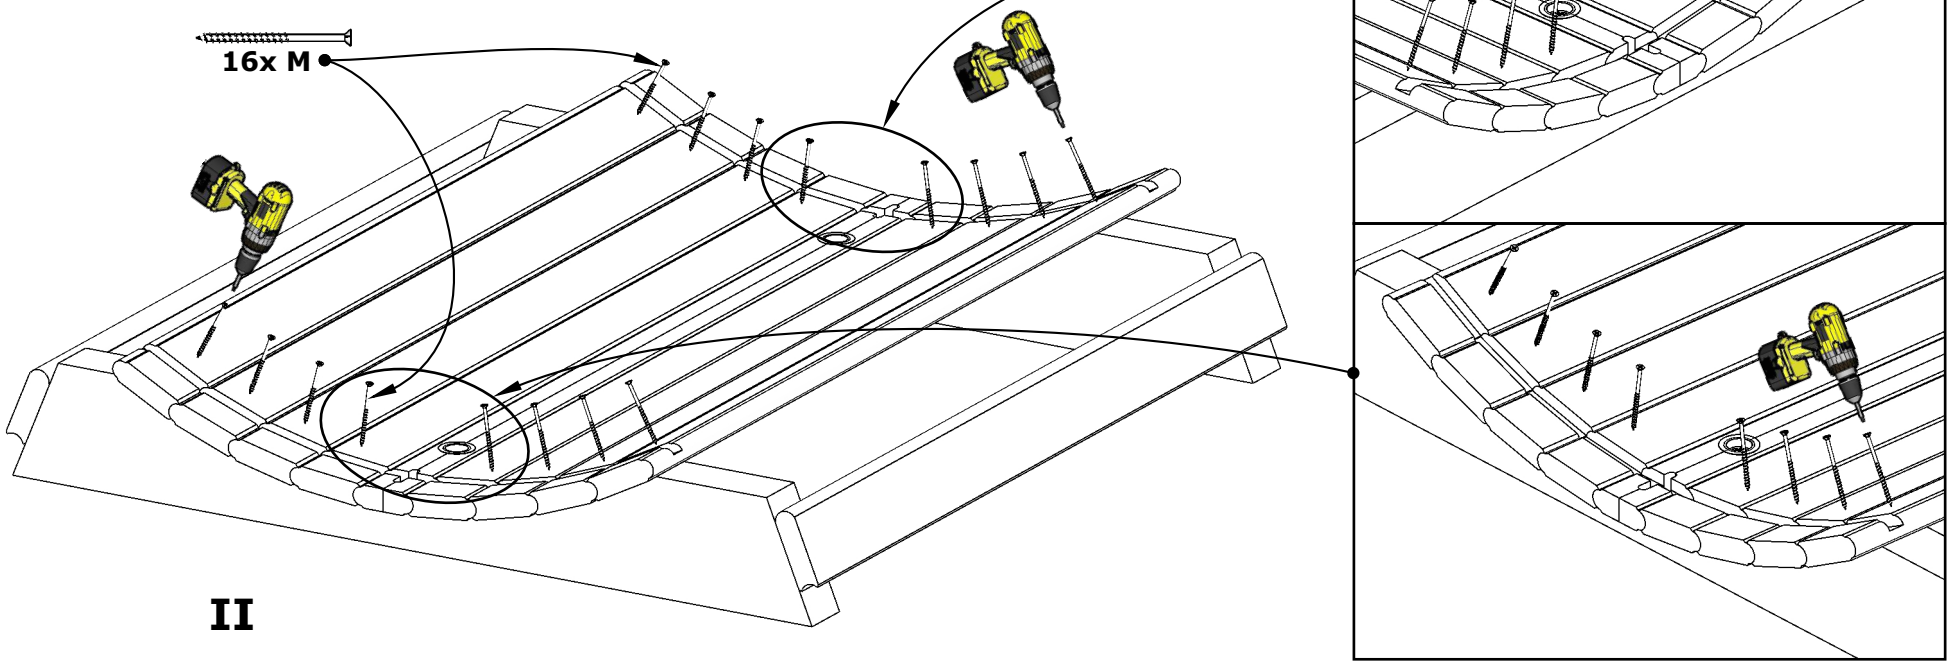

II

Half-moon back wall assembly

